



Marketed by
Robin Nest Venture (INDIA)

Enquiry No : +91 79744 68315



**POETRY FOR
BATH SPACES**

DESIGNbook
COLLECTION 2025



CONFIDENCE WITH BOLDNESS OF RESOLVE

Born from a deep understanding of self and the quiet confidence that accompanies it, Lost in thought, surrendering to the gentle touch of the wind, there's a sense of freedom that only solitude can bring. Elegance shines in moments of resilience, where the true self is unguarded and beautifully exposed.

FEATURES



6D Flushing
Technology,
First Time in India



Siphonic Flushing
Technology



Rimless
Closet



Anti-bacterial
Glaze




Water
Saving



Thin
Rim Basin



Easy to Clean
Glaze Technology

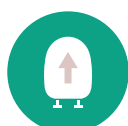

Quick-release
& Soft Close
Seat Cover




Integrated
Jet Spray





Specification


EVERY SPACE COUNTS, EVERY DETAIL MATTERS...


Sanitary ware is designed to be both functional and aesthetically pleasing, often incorporating the latest technology for improved performance and water efficiency. When choosing sanitary ware, factors like design, material, durability, and ease of maintenance are important considerations.


- 


ECO
FRIENDLY
- 


WATER
SAVING
- 


SOFT CLOSE
SEAT COVER
- 


ANTI
BACTERIAL
- 

EASY
CLEANING
- 

HIGH QUALITY
GLAZING
- 

TESTED, CERTIFIED
BY R&D
- 

STAIN
RESISTANT
- 

HEAT
RESISTANT
- 

SCRATCH
RESISTANT





JUPITER 9"
Size : L710 W405 H640



CANOPUS 9"
Size : L715 W400 H690



POLARIS 9" UF
Size : L660 W370 H720



POLARIS 9" JET UF
L660 W370 H720



SIRIUS 9"
L670 W365 H740



SIRIUS 9" JET
L670 W365 H740



MARS 9"
L650 W365 H705



NEPTUNE 9"
L650 W350 H750



VENUS 9" UF
L685 W370 H785



PLUTO 9"
L665 W360 H745



VEGA 9"
L660 W345 H740



AURIGA 4"
L655 W355 H725



AURIGA 4" JET
Size : L655 W355 H725



SATURN 12"
Size : L635 W370 H740



CASTER 9"
Size : L670 W360 H750



POLLUX 9"
L700 W380 H700





HENRY
L540 W400 H380



ALEXANDER
L495 W360 H360



WILLIAM
L550 W360 H400



SYPHONIC
FLUSHING



RIMLESS
DESIGN



JACKSON
L530 W350 H350



RIMLESS
DESIGN



COOPER
L520 W360 H380



CHARLES UF
L510 W380 H350



RIMLESS
DESIGN



ANTHONY
L480 W370 H330



TORNADO
FLUSH



RIMLESS
DESIGN



ROMAN
L530 W350 H350



RIMLESS
DESIGN



JOHN UF
L565 W365 H365



RIMLESS
DESIGN



HUDSON
L525 W360 H350



RIMLESS
DESIGN



MASON
L500 W350 H335



MASON JET
L500 W350 H335



ANGEL
L510 W380 H380



RIMLESS
DESIGN



LEO
L510 W380 H350



RIMLESS
DESIGN



MAX
L530 W350 H400



JAMES
L485 W350 H350



RIMLESS
DESIGN



JAMES JET
L485 W350 H350



RIMLESS
DESIGN



LEVI
L525 W350 H360



RIMLESS
DESIGN



LEVI JET
L525 W350 H360



JACK
L525 W350 H360



JACK JET
L525 W350 H360



THOMAS
L540 W365 H330



BROOKS
L500 W350 H335



BROOKS JET
L500 W350 H335



CHARLIE JET
L540 W350 H380



Crafted
for Comfort.



TEXAS
L545 W365 H390



THAR
L545 W350 H400

STRAP 4"



SCORPIO UF
L510 W350 H400



TESLA
L510 W380 H410



NEXON
L540 W380 H410



NEXON JET
L540 W380 H410



COROLLA
L510 W380 H410

STRAP 4"



SELTOS
L515 W340 H410

STRAP 4"



ANGLO INDIAN
L570 W465 H410



EWC



SWIFT

L575 W370 H420



ZEN

L550 W360 H425

Precision, Purity,
& Perfection.



NILE

L485 W410 H835

ONE PIECE
BASIN



The Future of
Bathrooms Begins Here.



VOLGA

L465 W380 H845



AMAZON

L425 W365 H855



GANGES

L420 W390 H830

MADE IN INDIA

ONE PIECE
BASIN



INDUS

L425 W370 H825



NIGER

L385 W385 H845



CONGO

L385 W385 H845



TIGRIS

L305 W320 H900



CAIRO

L380 W350 H650



PARIS

L470 W450 H385



TAMPA

L480 W370 H510



BORNE

L410 W390 H275



BRYAN

L365 W365 H295



JOPLIN
L360 W360 H450



MOSCOW
L360 W360 H450



VIENNA
L910 W425 H130



VENICE
L700 W400 H150



MADRID
L660 W425 H150



HELENA
L710 W360 H150



BEIRUT
L620 W400 H125



BERGEN
L600 W390 H110



ALBANY
L625 W425 H125



PANAMA
L600 W450 H190



TEHRAN
L550 W390 H160



ATHENS
L500 W300 H150



BAGOTA
L500 W370 H150



MERIDA
L560 W440 H150



DENVER
L480 W370 H160



EASTON
L545 W410 H145



DALLAS
L500 W365 H145



BANGOR
L480 W380 H120



TABLE TOP
BASIN



ZURICH
L480 W320 H100



MUSCAT
L470 W250 H120



AUSTIN
L450 W325 H150



TOPEKA
L440 W345 H185



BERLIN
L455 W420 H150



GENEVA
L420 W420 H140



OTTAWA
L400 W300 H130




RESTON
L400 W300 H140



LOWELL
L405 W325 H145

MADE IN INDIA


TABLE TOP
BASIN

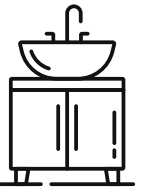

NASHUA
L365 W265 H110

Seamless Style,
Effortless Elegance.

COUNTER BASIN

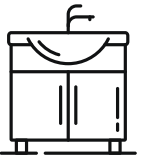

HAINES
L410 W410 H150




RECTANGLE
L540 W410 H205



OVAL
L470 W350 H200



PEDESTAL
BASIN



CANARY
L650 W460 H900



STORK
L605 W480 H860



FINCH
L580 W475 H830



PENGUIN
L600 W420 H830



MACAW
L570 W420 H785



SPARROW
L565 W430 H830



PIGEON
L560 W425 H845




DOVE
L550 W480 H845



TOUCAN
L500 W430 H850

MADE IN INDIA


PEDESTAL
BASIN



FALCON
L500 W420 H890




HAWK
L550 W420 H880

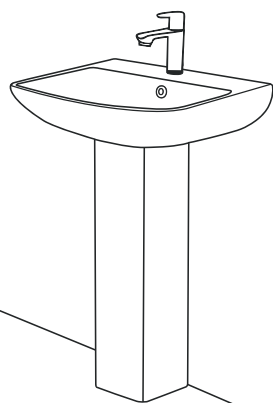

Seamless Style,
Effortless Elegance.


WALL HUNG
BASIN

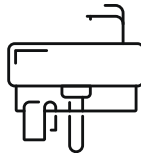

ORION
L500 W400 H160



TOKYO
L480 W350 H210

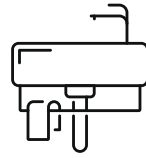

LATUR
L440 W330 H120



BUSAN
L465 W340 H160



OSAKA
L430 W300 H105



MASON
L420 W360 H125



MASSY
L480 W370 H200



OKARA
L400 W330 H150




KYOTO
L450 W300 H200



LOGAN
L390 W300 H150



KABUL
L350 W350 H100

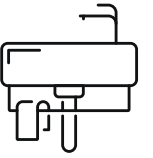

KOCHI
L350 W290 H110



HANOI
L400 W330 H150



MIAMI
L385 W450 H150



PARMA
L370 W270 H130



TUNIS
L300 W320 H130



MACAU
L460 W260 H110



JALNA
L300 W265 H150



KLANG
L300 W325 H130



JAMMU
L290 W225 H110

CORNER BASIN



IBIZA

L490 W340 H110



DAMAN

L370 W370 H190



GREVE

L350 W350 H150



PAMPA

L300 W300 H100



GENOA

L300 W300 H125



Cornered,
but never compromised...

MADE IN INDIA

INDIAN PAN



C.T PAN 20"

L525 W410 H185



ROYAL C.T PAN 21"

L545 W400 H205




ORISSA PAN 23"

L600 W480 H280



C.T PAN 23"

L575 W445 H215

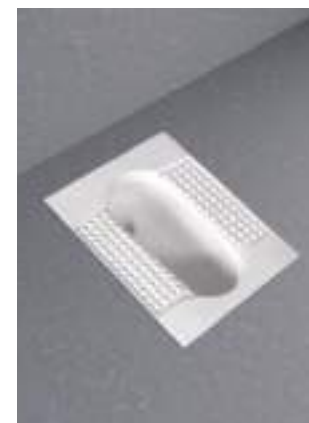

ACCU PAN 21"

L540 W430 H280



REGAL PAN 22"

L580 W450 H305



NOBLE PAN 24"

L600 W480 H240

Strong, simple,
and made to last...

URINAL



WIND
L305 W255 H440



LATIN
L305 W260 H520




RHINE
L250 W300 H505



MURRAY
L310 W310 H370



CORNER URINAL
L310 W270 H350

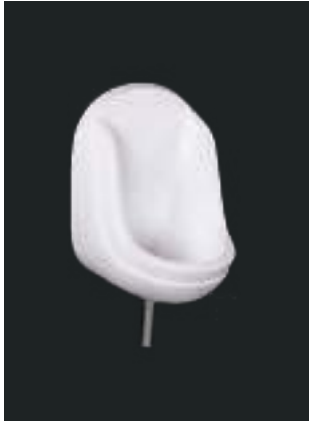

NANO LARGE
L320 W335 H425



FLAT BACK
L335 W270 H460



SQUATTING
L440 W320 H100

MADE IN INDIA

MARVELOUS COLORS
BY ROBIN FLY



**MERCURY
SMOKE 9" (M)**
L685 W375 H760



**LONDON
SMOKE (M)**
L410 W410 H120



**JAMES
SMOKE (M)**
L485 W350 H350



**MERCURY
CHOCO 9" (M)**
L685 W375 H760



**LONDON
CHOCO (M)**
L410 W410 H120



**JAMES
CHOCO (M)**
L485 W350 H350



**MERCURY
OLIVE 9" (M)**
L685 W375 H760



**LONDON
OLIVE (M)**
L410 W410 H120



**JAMES
OLIVE (M)**
L485 W350 H350



**MERCURY
PEACH 9" (M)**
L685 W375 H760



**LONDON
PEACH (M)**
L410 W410 H120



**JAMES
PEACH (M)**
L485 W350 H350



**MERCURY
OCEAN 9" (M)**
L685 W375 H760



**LONDON
OCEAN (M)**
L410 W410 H120



**JAMES
OCEAN (M)**
L485 W350 H350



**BOSTON
BLACK (M)**
L710 W380 H140



**GEORGE
BLACK (M)**
L510 W350 H360



**INDUS
GREY**
L425 W370 H825



**INDUS
MANGO**
L425 W370 H825



**INDUS
BLACK GOLD**
L425 W370 H825



**INDUS
MARBLE**
L425 W370 H825



**NIGER
MARBLE**
L385 W385 H845



**CONGO
GREY WHITE**
L385 W385 H845

MARVELOUS
COLORS

Add a splash of style
with every flush & flow...





EWC SEAT COVER (B)



EWC SEAT COVER (S)



EWC SOFT CLOSE SEAT COVER



ANGLO SEAT COVER (B)



ANGLO SEAT COVER (S)



INDIGO/DUAL



SENSOR FLUSH



PEARL/SIDE



LAKE/SIDE



AZURE/SINGLE



AQUA/TOP PUSH



NAVY/DUAL



SAILOR/DUAL



DELTA/DUAL



MARINE/DUAL




OCEAN/DUAL

ITEM	PROBLEM	PROBABLE REASONS	CORRECTIVE ACTIONS
Wash Basins I Table Top	Overflow Chocked & Foul Bed Odor	Waste Coupling used May Be Full Threaded	Waste Coupling Should Be Changed To SlotCut Coupling
	Water Deposit On Tap Platform Area & Inside Bowl Area	Basin is Not Fixed in Level Or Bracket is Not In Level	Should Be Done By Proper Leveling
	There is No Tap Hole in Basin	Tap Hole Could Be Semi Punched From Back Side	Tap Hole Should Be Created By Plumber From Semi punched Area
EWC I Pan Anglo Indian	Water Not Coming in Bowl Area While Flushing	Flush Bend is Not Inserted up To The End Of Inlet Hole	Insert The Flush Pipe Up To The End of Inlet (For Pan Closet: Check Whether Flush Pipe is Not Covering Flush Hole Which is in Both Side of Inlet Wall
		Closet / Pan May Be Not Leveled	Should Be Done By Proper Leveling
One Piece Closet	Water Not Coming in Bowl Area While Flushing	Mechanism inside Tank Could Not Working Properly	Change The Centre Pump of Mechanism
		There is No Water in Flush Tank	Increase The Ball Cock Height to The Max Level
	Water is Continuously Leaking Inside The Bowl	Mechanism Inside Tank Could Not Working Properly	Change The Centre Pump of Mechanism
	Water Quantity insufficient For Effective Flushing	Ball Cock Height Adjusted At Lower Level	Increase The Ball Cock Height to The Max Level
	Uneven Flow Of Water From Bith Side Of Closet	Closet is Not Leveled Properly	Closet Should Be in Proper Level
Wall Hung Closet	Water Not Coming in Bowl Area While Flushing	Flush Valve May Not Working Properly / Concealed Cistern is Not Working Properly	Should Change Flush Valve / Concealed Cistern
		Flush Pipe is Not Inserted Up To The End of Inlet Hole	Insert The Flush Pipe Up To The End of Inlet
	Water is Continuously Leaking Inside The Bowl	Closet is Not Leveled Properly	Closet Should Be in Proper Level
	Water Quantity insufficient For Effective Flushing	Connection Between Closet Outlet & Drainage Pipe is Not Proper	Should Be Done By Proper Connection By Experienced Plumber

NOTES :

Colours printed above may differ from original colours of ceramics. For actual selection refer samples or shade board.

Due to continuous upgradations, product specifications may change time to time.

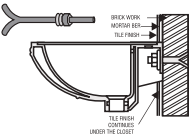


WALL HUNG BASIN

As per shown in the picture, the rag bolt must be grouted into the cement/concrete wall. The bolts must be fixed to the cement/concrete wall. Allow setting & checking than install it using nut and washer.

COUNTER WASHBASIN

At the beginning

- 1. A skilled or experienced person should install counter lavatories.
- 2. Avoid using adhesive with this product.
- 3. Check the waste area and supply tubing if required.
- 4. Do not open the lavatory from its protective carton until you are ready for installation.
- 5. Please follow all local building and plumbing codes.




MATERIAL & TOOLS

Measure tape, Keyhole or saber saw, Hammer, Glasses, Rags or Paper toweling, Drill (1/2 dia, drill bit or larger), Pencil, sealant, sharp knife or scissors.

INSTALLATION OF LAVATORY


Please Note : Please install it in a way that future removal from underneath the counter top is possible without damaging the counter top.

- 1. Please check the desired location for clearance between the back splash, faucet, Fixture and cabinet.
- 2. Please cut the template.
- 3. Please carefully trace the template on the counter top directed.
- 4. Please mark the faucet hole centerline on the counter top.
- 5. Please drill a 1/2" pilot on the inside of the cut line.



For Wood Counter tops:

- 1. Mark and per-drill the wood screw holes at the locations shown on the template.
- 2. Waterproof any exposed areas of wood.



For Marble Counter tops:

- 1. Position the counter top upside down on foam padding to protect the surface. Mark and drill 3/6" holes 5/8" deep at the locations shown on the template.
- 2. Use a setting tool and hammer to secure the anchors.



For All Installations:

- 1. If the counter top has not been installed, install it at this time.
- 2. Drill the faucet holes according to the faucet installation instructions.
- 3. Install the faucet to the counter top according to the manufacture's instructions.
- 4. Install the drain to the lavatory according to the manufacture's instructions.

MAINTENANCE

Like any other part of your house, the bathroom can be made to look great and made to last long if it is taken care of regularly. To make your bathroom beautiful here are some invaluable tips.

Wash Basin :

A mild detergent can be used to wash the basin at least once a day. After washing, the basin should be wiped out clearly to avoid water stains.

Closets :

Cleanser like Harpic can be used to clear the closet with soft plastic brush, at least once a day. To avoid minute discoloring, after flushing the toilet give it a once over with the soft brush. Keep the toilet brush handy in a convenient stand nearby. In case of toilets and basins, if there has been no maintenance since long period of time, water deposits and discoloration can form on the surface of areas that get wet. In such cases, these stains/marks can be removed with the help of a solution of dilute hydrochloric acid. Clean with a soft cotton cloth and warm water with soap. Do not use thinner, day cleaning liquids or powder paste. Use a liquid cleaner at least twice a week. Use brasso or car rubbing compound and then polish with a cloth to remove fine scratches.